


PARAMOUNT

F L O O R I N G

ENG. HARDWOOD TRANSITION MOLDINGS FOR 7/16" FLOORS


7/16" FLUSH REDUCER

Used between floors of unequal height.

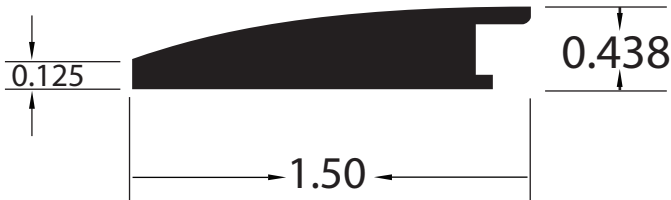


7/16" FLUSH STAIRNOSE

Finishes the end of a step.

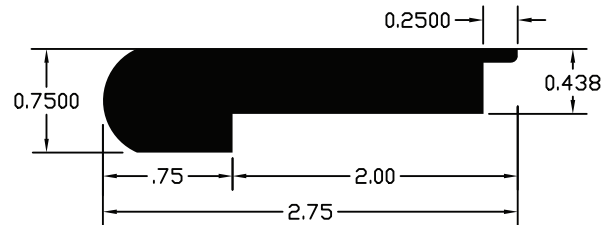


T-MOLD

Used between floors of equal height.

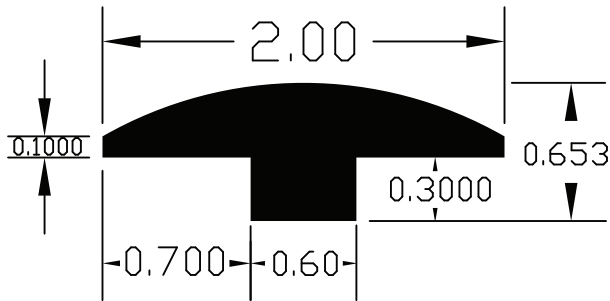


THRESHOLD

Used where the flooring meets another flooring of similar but different height.

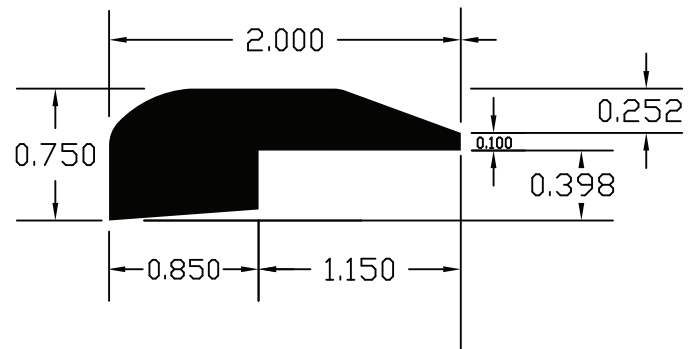

WALL BASE

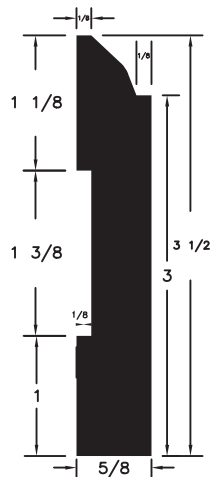

QUARTER ROUND

